

## Firmware Recovery Instruction - Xtreme X82HD

1. Copy the firmware file (install.img) on the USB drive's root directory.
2. Disconnect the power adapter of the player from the DC connector.
3. Connect the USB drive into the USB port of the player.
4. Press **Power** button on the front panel of the player.
5. While you are pressing **Power** button, connect the power adapter into the DC connector of the player. Do not release **Power** button until booting image is displayed on the TV screen.
  - If you release **Power** button before booting image is displayed on TV screen, the recovery may fail. In this case, you have to return to step 4.
6. If booting image is displayed on the TV screen, release **Power** button.
7. The system automatically enters firmware upgrade mode.
8. Once the upgrade process is completed, the player will start again. Once the player restarts, the new firmware is automatically loaded.

### Important:

1. Make sure AC power adapter remains connected during the boot loader update. A power disruption during the update process can corrupt the system firmware.
2. If the power is off during firmware update, fatal damage may be caused to the product.

### Note:

1. Other functions will not activate while firmware update takes place.
2. It may take 5 minutes to update the firmware.