

asm1062 asm1062r legacy firmware update SOP

Note: Program tool have to run it on real DOS environment, not Windows DOS mode

1. Please unzip RE1062.A19.zip and copy RE1062.A19 folder to C:\
2. Boot into DOS
3. Please into C:\RE1062.A19
4. Type " ahci.bat " to start update firmware
5. When screen shown " PASS : 1 FAIL : 0 " that's mean update finish and successful.



Check new Firmware version

Firmware Version: 190920_00_00_00

